

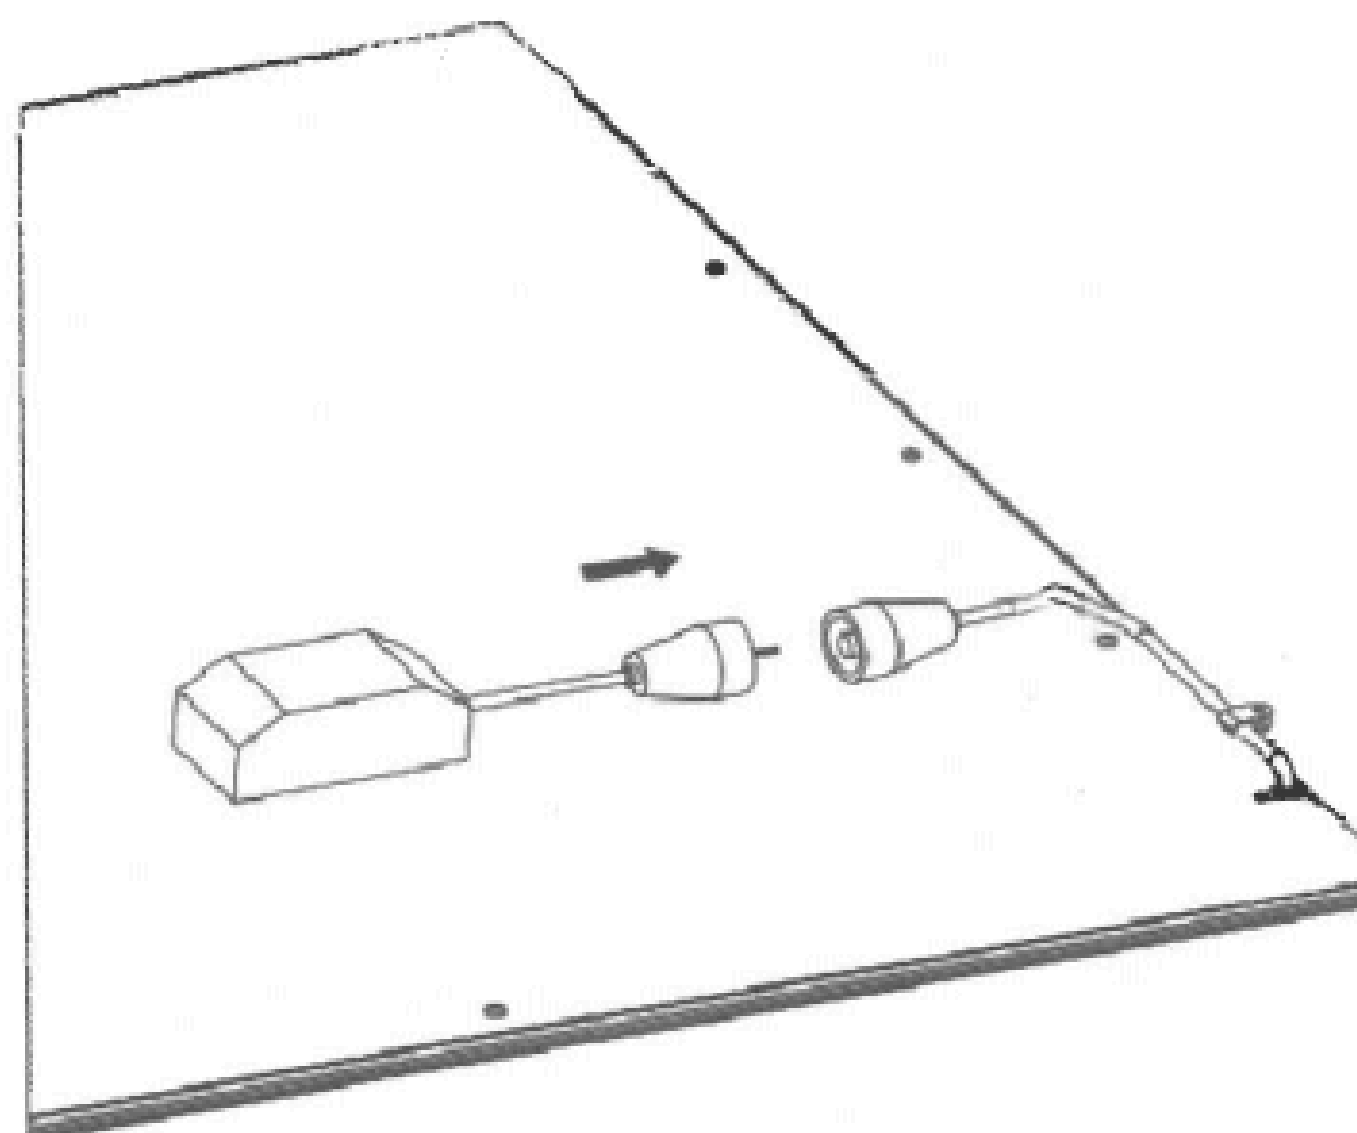


INSTRUKCJA MONTAZU PANEL LED PANNELLO

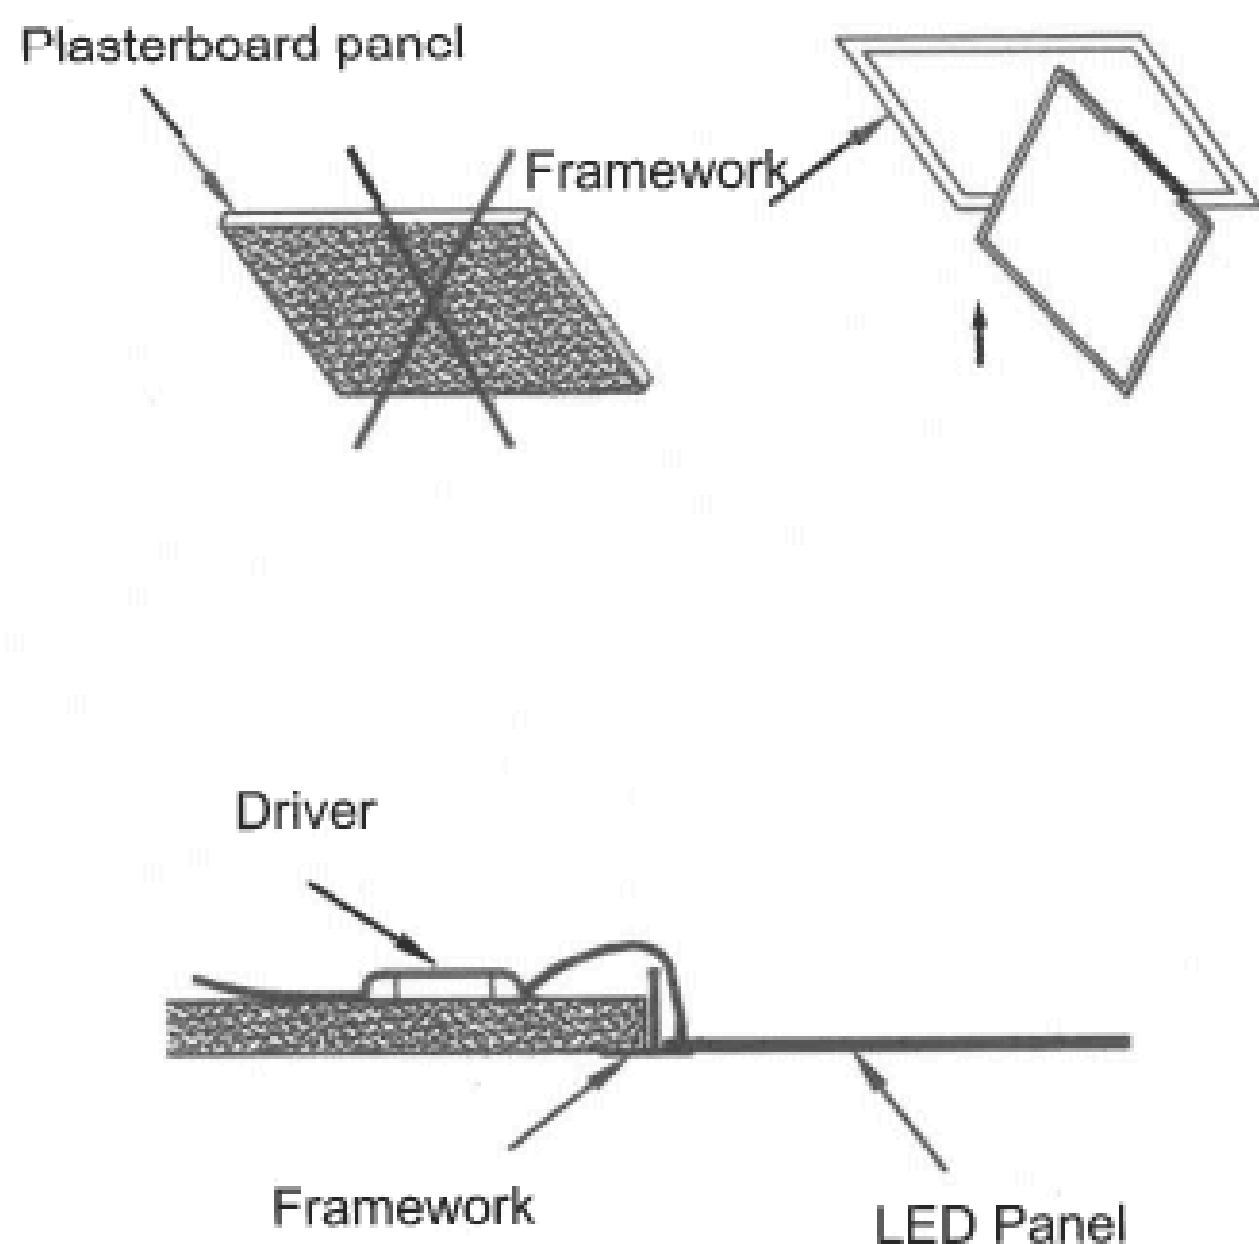


with accessories

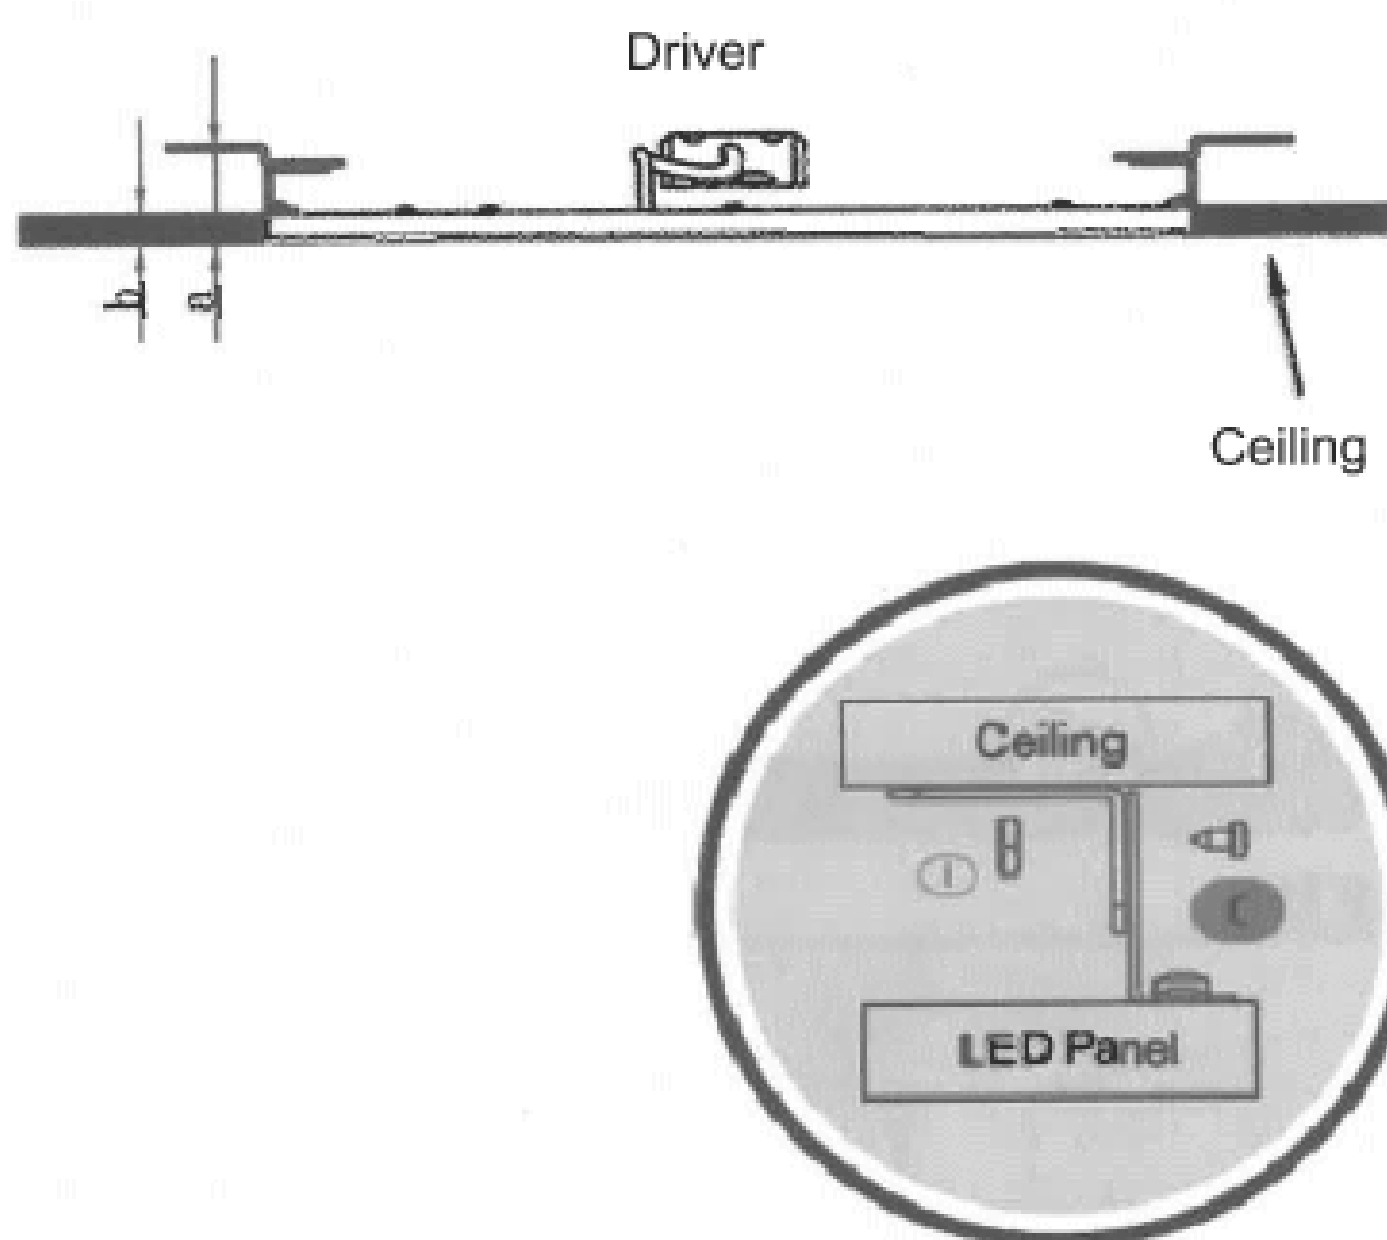

Additional note of instruction sheet

For a correct wiring, please follow scrupulously the following indication:

1 Switch off

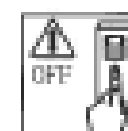

2 Unscrew the two screws of the lid from the side where on the body you can see the indication L and N

3 Wire the specific cables L (Line) and N (Neutral) Blue, 

4 Ensure that the screws are well tightened and that there are no strands out of the terminals



5 Tighten all terminal screws firmly

6 Place again the driver's lid and tight the lid with its screws


7 Ensure that the lid pushes the double insulation of the cable and tighten the screws.

The lid works also as an anti-tear system.


8 Switch on

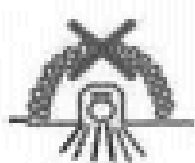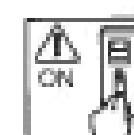


Devices not suitable to be covered with technically insulation material.

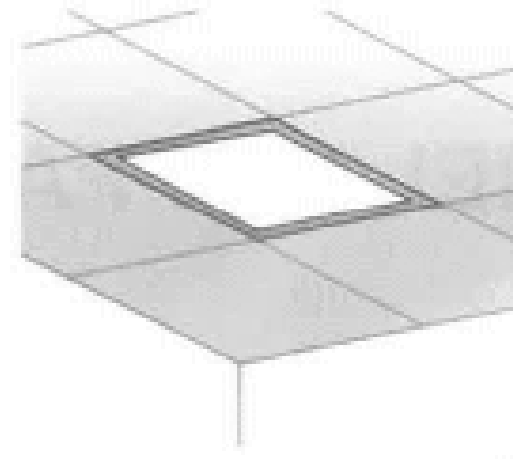


1

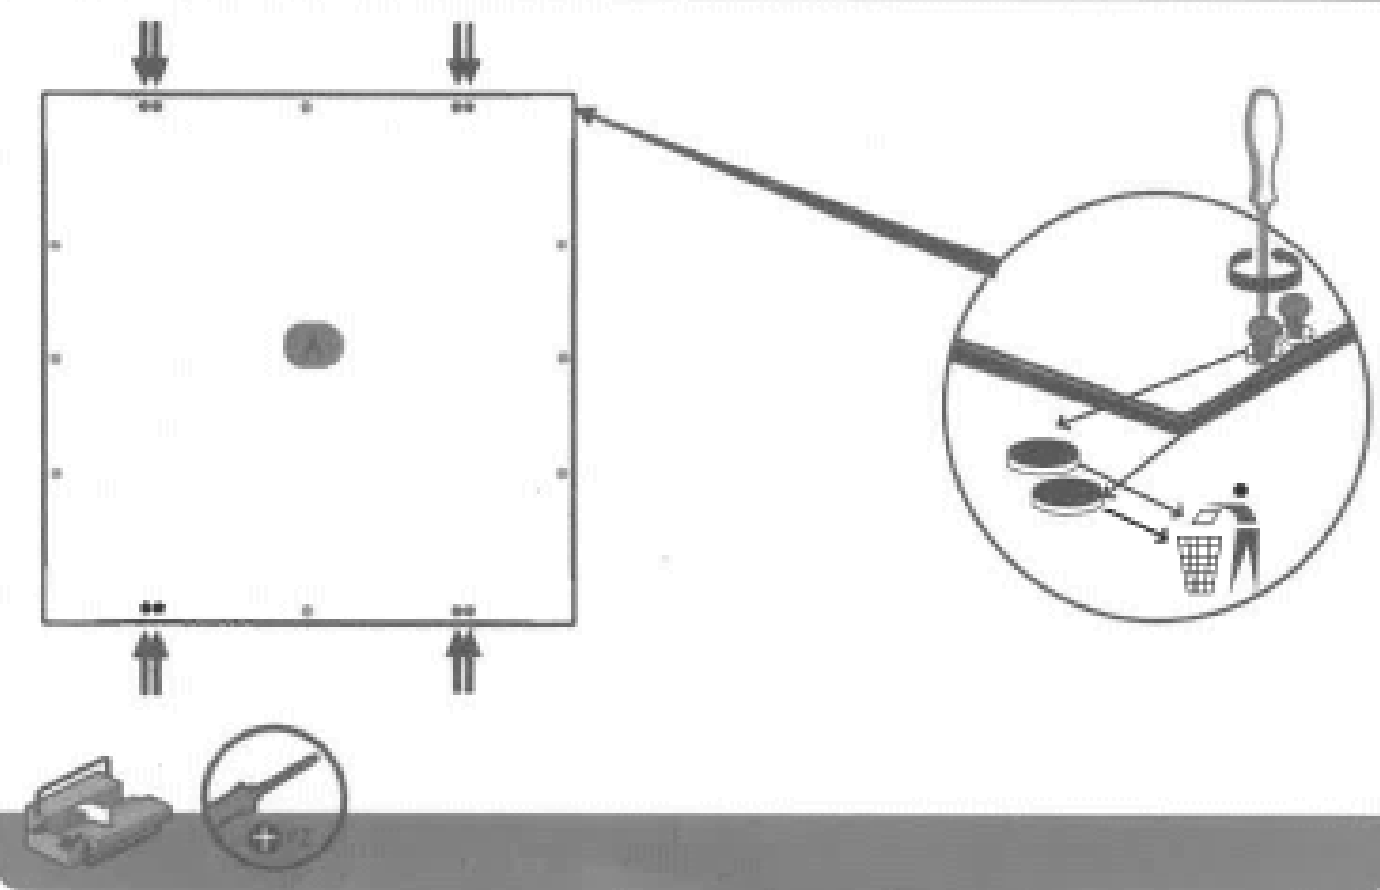


2



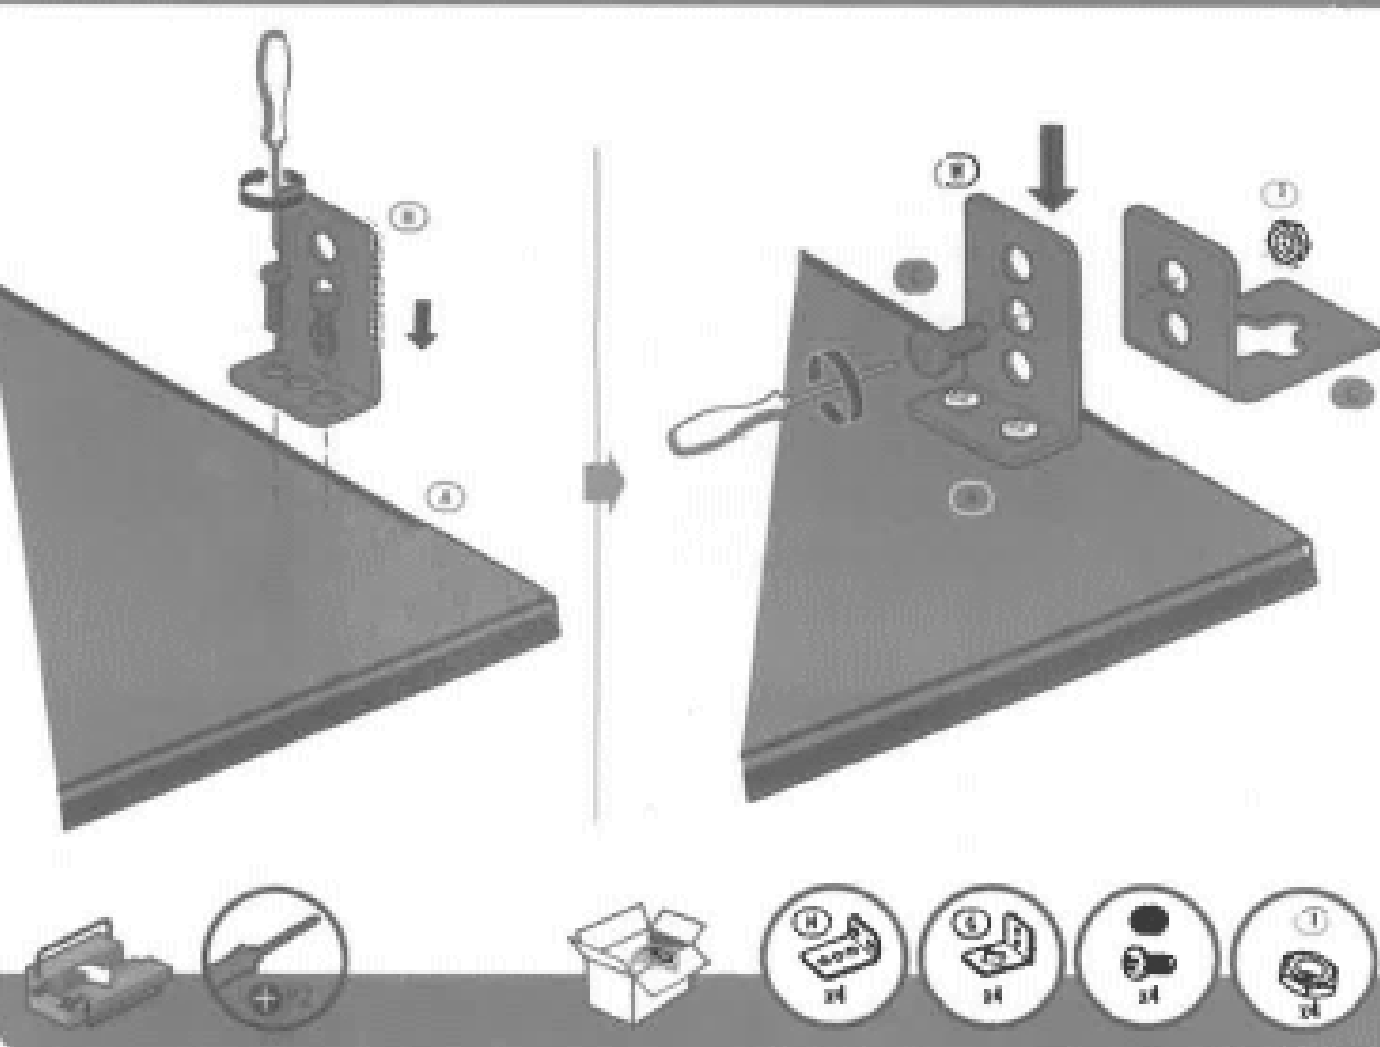


3


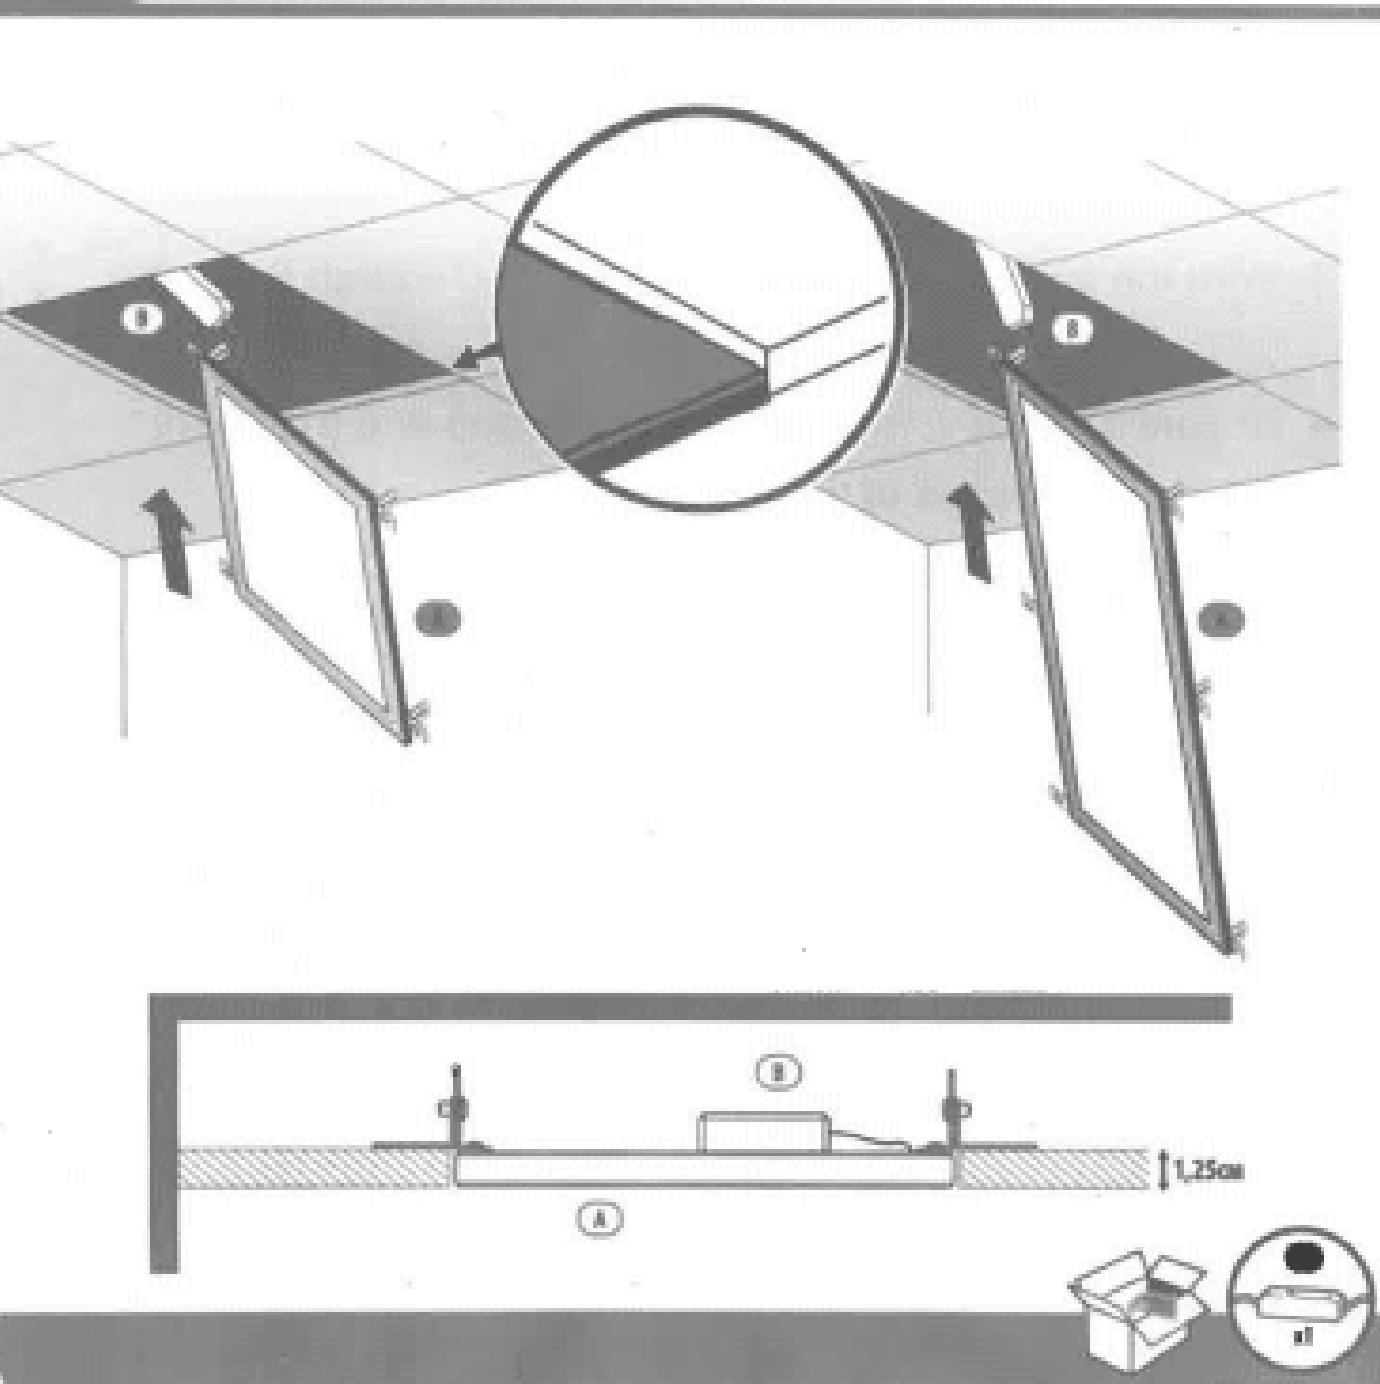


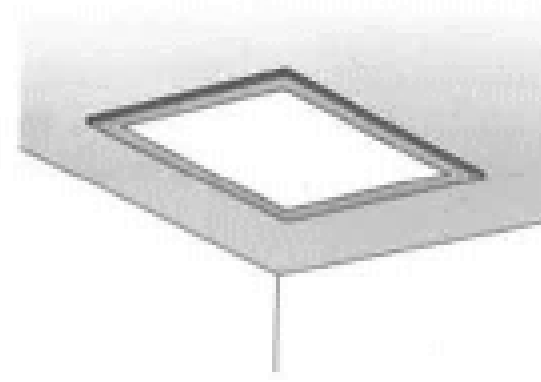



1

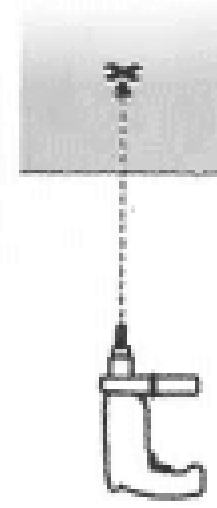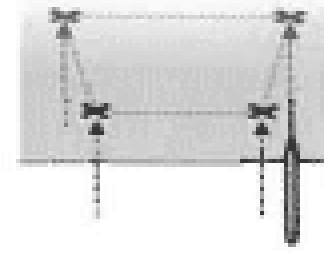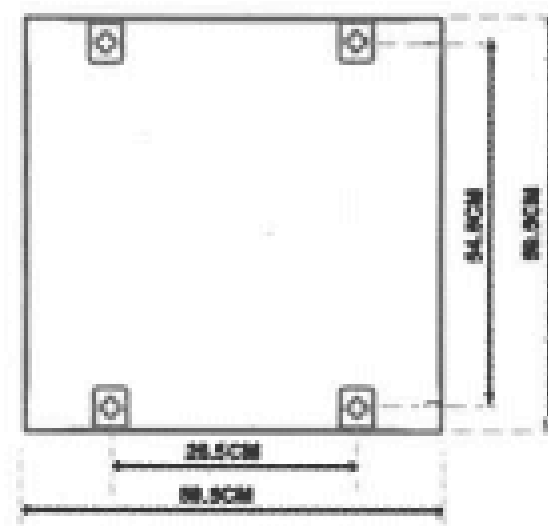

2

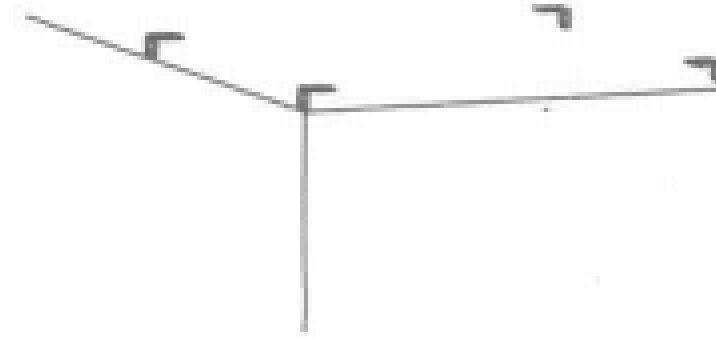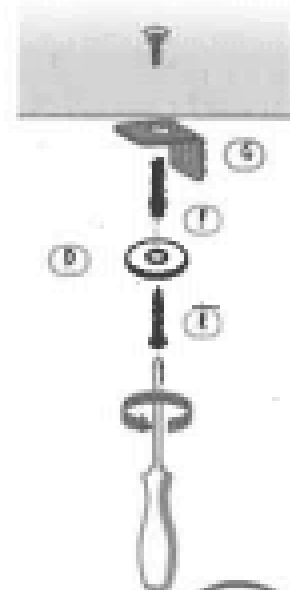

3

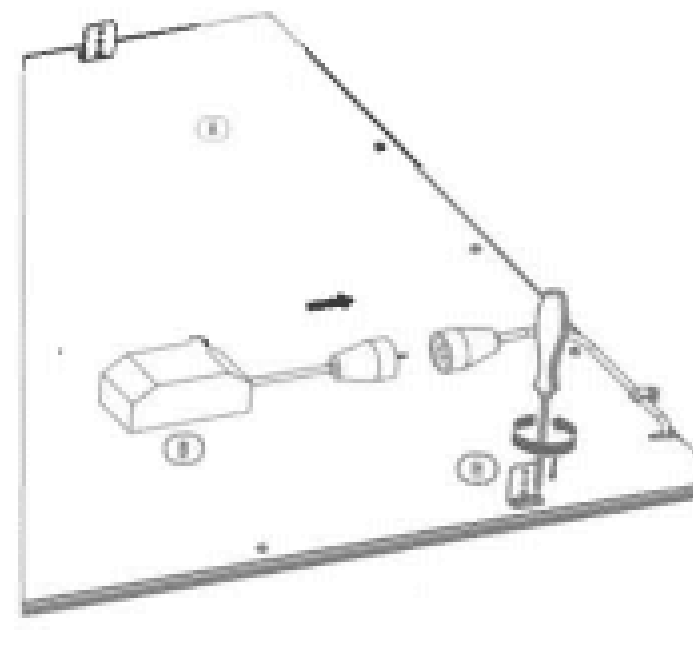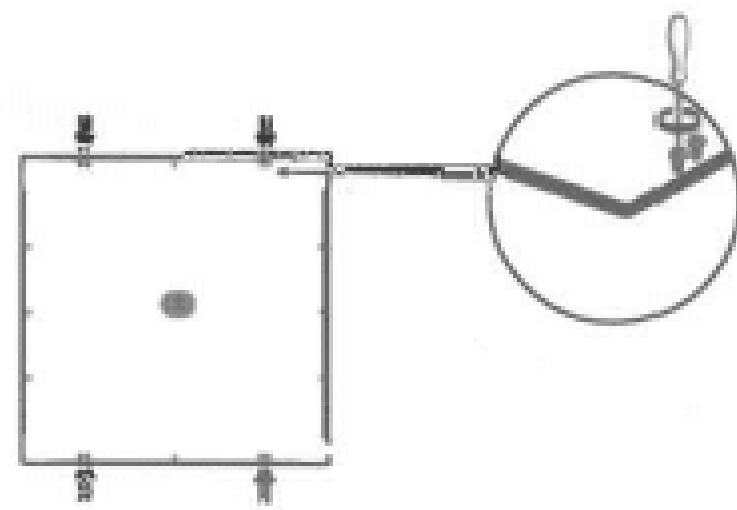

4

